



TTDM-128
TraceTek Leak Detection
Master Module

User Manual



Table of Contents

Overview	3
System Configurations	3
Quick Setup.....	5
Common Setup Procedures	5
Configuration Specific Setup	7
Introduction.....	9
The TraceTek TTDM-128 Network	9
Description of TraceTek Leak Detection System.....	10
TTDM-128 Features	11
Identifying TTDM-128 Features.....	11
The TTDM-128 Keypad	12
The TTDM-128 System Display	13
Normal Operation	14
Current Event/Status Display	14
Navigating the Menu Structure.....	14
Status of Individual SIM channels	18
Modifying Settings for Individual SIM Channels	20
Events History Log	22
Detailed Setup.....	23
General Set-up	23
Leak Setup	24
SIM Network.....	25
TTDM Network	27
Self-Test	28
Event Response	29
Leak Detection and Location Events.....	29
Service Events	30
Fault Events	31
Multiple Events	32
Maintenance.....	34
Appendix 1 - Events Glossary.....	36
Appendix 2 - Connection to Other Devices.....	37

Overview

READ BEFORE USE

Please read these instructions carefully and keep them in a safe place (preferably close to the TTDM) for future reference. The instructions provided in this booklet must be followed carefully to ensure proper operation. If the equipment is used in a manner not specified by the manufacturer, the protection provided by the equipment may be impaired.

PREPARATION

Before operation, follow the installation instructions to ensure that each module is properly mounted and wired. If these steps have not been taken, refer to the installation documents provided for each module. To obtain this literature or for technical assistance, contact your local TraceTek distributor or visit our web site (<http://www.tycothermal.com>).

IMPORTANT: There should be a “System Map” for each sensor circuit. The system map should show the sensing cable layout with reference to readily identifiable landmarks and with actual distance measurements every 5 m (16 ft) throughout the system. The map is normally completed at the time the leak detection system is commissioned. Ensure that a copy of the system map is kept near the TTDM-128 module. If the TTDM-128 is connected to a building management system, ensure that a copy of the system map accompanies the building management system.

Notes

- Throughout this manual, the examples shown use distances in meters.
- Later versions of software may provide new features and change certain other details. This manual documents UI software version 3.10i.

System Configurations


The TraceTek TTDM-128 module has many possible applications and configurations. The TTDM-128 can be configured as a stand-alone leak detection panel, or it can be used in a network of other TraceTek leak detection modules, such as the TTSIM sensor interface module, the TT-NRM network relay module, or additional TTDM modules. In all cases, each TTDM-128 offers the following features and capabilities:

- Directly monitor the equivalent of up to 1500 m (5000 ft) of TraceTek sensor cable and point sensors.
- 1024 event memory.
- Built-in status and alarm relays.
- Optional 4-20 mA output.

TTDM-128 SINGLE CHANNEL STAND ALONE SYSTEM

(See Quick Setup on page 7)


- TTDM-128 with up to 1500 m (5000 ft) of TraceTek sensor cable, or a combination of sensor cable and point sensors.



SINGLE CHANNEL WITH REMOTE REPEATER

(See Quick Setup on page 7)


- Stand-alone system with additional TTDM-128 acting as a remote display.
- Remote panel mimics all conditions at the primary panel.
- Primary panel acts the same as a stand-alone TTDM-128 system.
- Modbus interface to a host computer is only available at the remote TTDM.

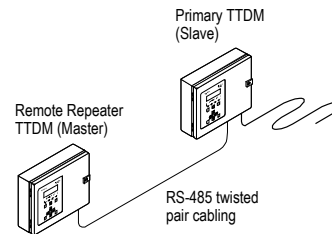

SINGLE TTDM-128 WITH NETWORK SYSTEM

(See Quick Setup on page 8)


- A single TTDM-128 is used as the master module for a network of up to 126 additional TraceTek modules (TTSIM, TT-NRM).

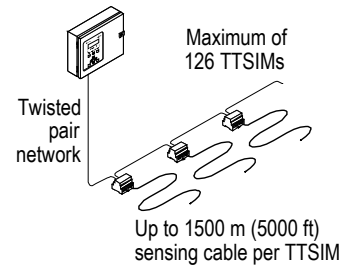

MULTIPLE TTDM-128 WITH NETWORK SYSTEM

(See Quick Setup on page 8)

- The same as the single TTDM network system, except with additional TTDM-128's acting as slave modules.
- One TTDM-128 acts as the network master, the other TTDM-128's act the same as stand-alone systems.
- Additional TTSIM and TT-NRM modules can be installed on the network, up to a total of 127 modules (including TTDM's).

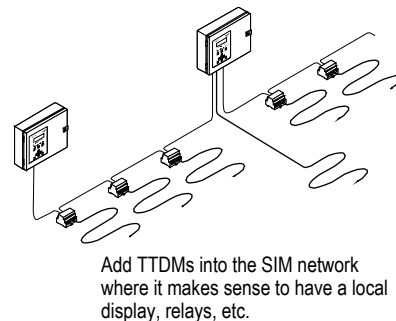

Quick Setup

Common Setup Procedures

All modules, cables and sensors should be installed in accordance with their installation instructions prior to performing the setup procedures.

BASIC TTDM-128 SETUP (FOR ALL CONFIGURATIONS)

- ▶ Power up the TraceTek system. Wait while the TTDM completes its self test and network initialization process.
- ▶ With the TTDM on the Current Event/Status display, press the **MENU** key.
- ▶ Using the **Down** arrow key, scroll to General Setup and press **ENTER**.
 - Set the Time and Date (adjust values as necessary using the arrow keys, then press **ENTER**).
 - Select the desired language.
- ▶ Press **MENU** to return to the Current Event/Status display.

SETTING TTSIM ADDRESSES ON NETWORK SYSTEMS

If your system includes TTSIM modules, their network addresses must be set to unique values in the range from 2 to 127 (address 1 is the default address of the TTDM's internal Sensor Interface board). If TT-NRM network relay modules are installed, the TTSIM addresses must be different than any TT-NRM addresses.

- ▶ With the TTDM on Current Event/Status display, press **MENU**.
- ▶ Use the **Down** arrow key to select *SIM Network*, then press **ENTER**.
- ▶ For each TTSIM (perform complete procedure before continuing to next TTSIM):
 - Place the TTSIM configuration jumper in the CFG position (see TTSIM Installation Instructions).
 - With the TTDM in the *SIM Network* menu, use the **Up** and **Down** arrow keys to select Set SIM Address, then press **ENTER**.
 - Press **ENTER** again, use the arrow keys to input the new TTSIM address, then press **ENTER**.
 - Return the TTSIM configuration jumper to the normal operating position (see TTSIM Installation Instructions).
 - Press **Esc** twice.
- ▶ Press **MENU** to return the TTDM to Current Event/Status Display mode.

CHANGING LEAK CHANNEL ID TAGS

Each leak detection channel (TTDM or TTSIM) can be given a unique alpha-numeric identification tag. To change the ID tag of a channel:

- ▶ With the TTDM in normal operating mode and displaying the status of the desired leak detection channel, press the **Down** arrow key:
 - Use the **Down** arrow key to scroll to select ID, then press **ENTER**.
 - Using the **Left** and **Right** arrow keys to select the character position, and the **Up** and **Down** arrow keys to change the letters and numbers, enter the desired ID tag. Press **ENTER** when finished.
 - Press **MENU** to return to the Current Event/Status Display.

Time saving hint

- If the space to the right is blank, press the right arrow to duplicate the last letter entered
- Use the **RESET** key to jump between letters, numbers and blank

CHANGING LEAK CHANNEL UNITS

The unit of measure for circuit length can be changed individually by channel, or for all channels.

To change units for an individual channel:

- ▶ With the TTDM in the Current Event/Status Display and displaying the status of the desired leak detection channel, press the **Down** arrow key.
- ▶ Use the **Down** arrow key to select TestLength, then press **ENTER**.
- ▶ Use the **Up/Down** arrow keys to select the desired units (feet, meters or zones) then press **ENTER**.
- ▶ Press **Menu** to return to the Current Event/Status Display.

To change units for all channels at once:

- ▶ A password is required to access the Special menu and change all units. To input the password:
 - With the TTDM in the Current Event/Status Display press the **Menu** key.
 - Use the **Down** arrow key to select General Setup, then press **ENTER**.
 - Use the **Down** arrow key to select Password, then press **ENTER**.
 - Use the arrow keys to input the password 04000, then press **ENTER**.
 - Press **Esc**.
- ▶ With the display showing the General Setup menu, use the **Down** arrow key to select Special, then press **ENTER**.
- ▶ Use the **Down** arrow key to select Set All Units, then press **ENTER**.
- ▶ Use the **Up/Down** arrow keys to select the desired units (feet, meters or zones) then press **ENTER**.
- ▶ Press **Menu** to return to the Current Event/Status Display.

SET HOST PORT PARAMETERS

For TTDM's that are connected to a host computer, DCS or building management system, the host port parameters must be set.

- ▶ With the TTDM in the Current Event/Status display, press **Menu**.
- ▶ Use the **Down** arrow key to select *TTDM Network*, then press **ENTER**.
- ▶ Use the **Down** arrow key to select the desired parameter, then press **ENTER**. If asked for a password, input 00010 and press **ENTER**. The parameters that can be changed are:
 - Baud: select host port baud rate.
 - Modem: Define modem dialing strings.
 - 485 Address: Set the TTDM's MODBUS address.
 - TTDM: Select the host port mode (Master or Slave). The password for this parameter is 04000.

NOTE: For communication with automation systems, PC's and other host systems, set the port to Master. Slave mode is used only for communication to a TTDM operating as a Remote Display.

Configuration Specific Setup



STAND ALONE SINGLE CHANNEL SYSTEM

- ▶ Perform Basic TTDM-128 Setup (page 5).
- ▶ Assign the leak detection channel tag if required (page 5).
- ▶ Perform the Host Port Setup if required (page 6).

SINGLE CHANNEL WITH REMOTE REPEATER

Before powering up the system:

- ▶ Remove the internal Sensor Interface Board from the Remote Repeater TTDM.
- ▶ Connect the RS-485 host port (J13) of the Primary TTDM to the TraceTek Network port (J10) of the Remote Display TTDM.

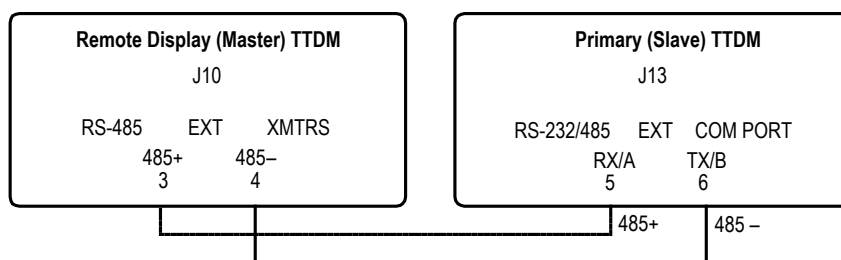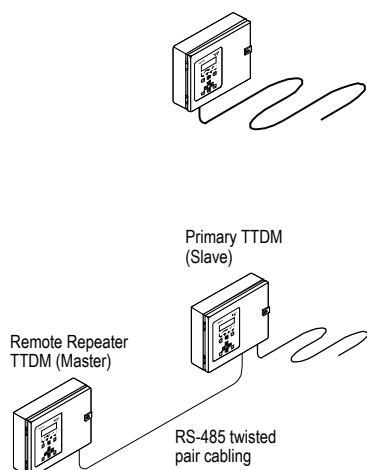

Remote repeater RS-485 connection diagram

You can now power up the system and proceed with setup as follows:

At the Primary (Slave) TTDM

- ▶ Perform Basic TTDM-128 Setup (page 5).
- ▶ Assign the leak detection channel tag if required (page 5).
- ▶ Make sure that the Host Port Mode Selector Switch on the User Interface board is set to RS485.
- ▶ Set the host port parameters as follows (page 6):
 - Set baud rate to 9600.
 - Set TTDM mode to Slave.

At the Remote Repeater (Master) TTDM

- ▶ Perform Basic TTDM-128 Setup (page 5). Be sure the settings match those of the Primary TTDM.
- ▶ Perform the Host Port Setup as required (page 6). Check that the TTDM mode is set to Master.
- ▶ Change the Communication Timeout parameter:
 - With the TTDM in the Current Event/Status display, press **MENU**.
 - Use the **Down** arrow key to select General Setup, then press **ENTER**.
 - Use the **Down** arrow key to select Password, then press **ENTER**.
 - Input the value 04000, then press **ENTER** followed by **Esc**.
 - Use the **Down** arrow key to select Special, then press **ENTER**.
 - Use the **Down** arrow key to select Comm Timeout, then press **ENTER**.
 - Use the arrow keys to input the value 300 ms, then press **ENTER**.
 - Press **MENU** to return to the Current Event/Status display.

- ▶ Initialize the SIM network:
 - With the TTDM in the Current Event/Status display, press **MENU**.
 - Use the **Down** arrow key to select SIM Network, then press **ENTER**.
 - Use the **Down** arrow key to select Init Network, then press **ENTER**.
- ▶ Change the leak detection channel ID tags (page 5) to match what was set at the Primary TTDM.

SINGLE TTDM-128 WITH NETWORK SYSTEM

- ▶ Perform Basic TTDM-128 Setup (page 5).
- ▶ Perform the Host Port Setup if required (page 6).
- ▶ Assign a unique address to each TTSIM (page 5).
- ▶ Change the leak detection channel ID tags for each TTSIM if required (page 5).

MULTIPLE TTDM-128 WITH NETWORK SYSTEM



One of the TTDMs must be selected as the master TTDM; all remaining TTDM's in the network will operate in "slave" mode.

At each slave TTDM:

- ▶ Perform Basic TTDM-128 Setup (page 5).
- ▶ Assign the leak detection channel tag (SIM ID) if required (page 5).
- ▶ Make sure that the Host Port Mode Selector Switch on the User Interface board is set to RS485.
- ▶ Set the host port parameters as follows (page 6):
 - Set baud rate to 9600.
 - Set TTDM mode to Slave.
- ▶ Initialize the SIM Network (page 26).

At the master TTDM:

- ▶ Perform Basic TTDM-128 Setup (page 5). Be sure the settings match those of the Primary TTDM.
- ▶ Perform the Host Port Setup as required (page 6). Check that the TTDM mode is set to Master.
- ▶ Change the Communication Timeout parameter:
 - With the TTDM in the Current Event/Status display, press **MENU**.
 - Use the **Down** arrow key to select General Setup, then press **ENTER**.
 - Use the **Down** arrow key to select Password, then press **ENTER**.
 - Input the value 04000, then press **ENTER** followed by **Esc**.
 - Use the **Down** arrow key to select Special, then press **ENTER**.
 - Use the **Down** arrow key to select Comm Timeout, then press **ENTER**.
 - Use the arrow keys to input the value 300 ms, then press **ENTER**.
 - Press **MENU** to return to the Current Event/Status display.
- ▶ Initialize the SIM network (page 26).
- ▶ Change the leak detection channel ID tags (page 5) to match what was set at the Primary TTDM.

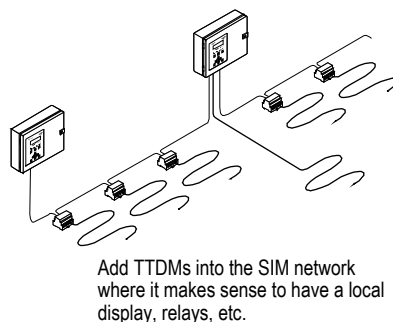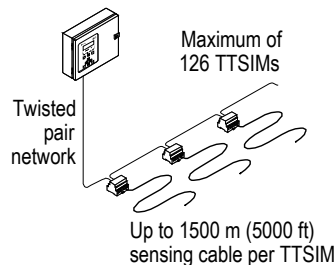

Introduction

The TraceTek TTDM-128 Network

The TTDM-128 can directly monitor up to 1500 m (5000 ft) of TraceTek sensor cables, up to 150 TraceTek point sensors and networks of up to 126 external TraceTek modules (which can include any combination of TTSIM sensor interface modules, TT-NRM network relay modules or up to 32 additional TTDM's operating in slave mode). With a fully implemented network, it is possible to monitor as much as 190 km (119 miles) of TraceTek sensor cable and provide as many as 320 discrete relays to handle a wide variety of alarm and telemetry functions.

NOTE: the maximum number of TTSIMs on a network must be reduced by 4 for each TT-NRM added.

Each TTDM-128 provides:

- An internal Sensor Interface Module (SIM), capable of directly monitoring up to 1500 m (5000 ft) of sensor cable, 150 point sensors, or a combination of both cable and sensors.
- 3 alarm relays, providing status for:
 - Leak alarm
 - Service required alarm
 - System fault alarm
- Serial communication to a host computer, control system or building management system using RS-232 or RS-485 hardware and the MODBUS™ protocol.
- Event history log
- Optional 4-20 mA output

When liquid is detected on any sensor, the TTDM-128 sounds an alarm, illuminates an LED, closes relay contacts, and displays the channel number and location of the leak on an LCD display. Each alarm event (leak, service, fault, etc.) and user action is logged into the event history file. The event history file shows the type of event as well as the time and date that the event occurred. This information is available to any host PLC or building automation system via an RS232 or RS485 serial connection and the MODBUS protocol.

A simple system map (typically an as-built drawing of the sensor installation with reference measurements) showing where the sensors have been installed is the only field calibration requirement.

Each individual sensor circuit detects, locates, and tracks leaks independently from the other circuits in the leak detection system. There is no loss of sensitivity and no re-mapping required after an initial leak is detected.

The TTDM-128's internal SIM has been designed for use with the following TraceTek sensing cables:

- TT1000 (water)
- TT3000 (Acids and Aqueous chemicals)
- TT5000 (liquid hydrocarbon fuels and oils)
- TT5001 (organic solvents)

A variety of TraceTek Point sensors, as well as contact closure devices such as float switches, can also be used with the TTDM-128.


Description of TraceTek Leak Detection System

TRACETEK SENSING CABLES

The TraceTek leak detection system is based on sensing cables that detect liquid at any point along their length. A variety of TraceTek sensing cables are available to detect different types of liquids. While multiple types of sensing cables may be used in a single sensing circuit, if different types of fluid are being monitored in the same area it may be more effective to create multiple circuits, each with dedicated sensor cable of a specific type.

COMPONENTS OF TRACETEK LOCATING SYSTEM

TraceTek leak detection is a versatile modular system, with interchangeable components that can be configured in many different ways. For more information on the products and systems available, consult the appropriate TraceTek product selection guide or your local TraceTek representative.

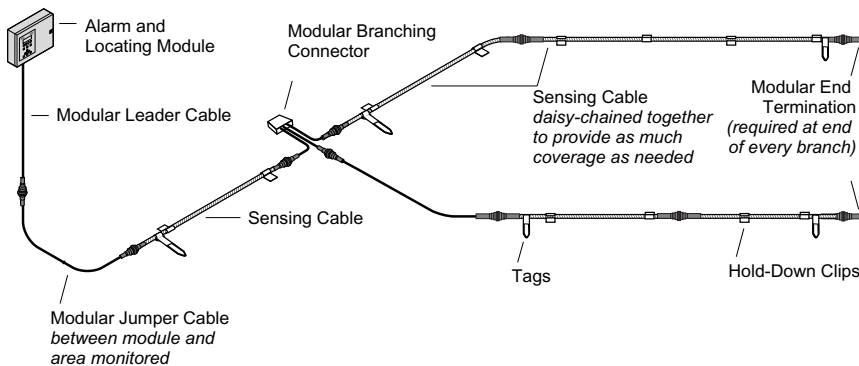


A TraceTek locating system provides distributed leak detection and location over long distances and wide areas. A TraceTek locating circuit consists of a TraceTek locating module (TTDM-128, TTSIM), sensing cable and/or point sensors, and circuit components (leader cable, jumper cables, end terminations, weighted lengths, and branching connectors) with connectors that allow components of the system to plug together.

The **weighted length** resistor simulates a 4.5 m (15 ft) length of sensing cable. Installed at the boundary between two areas of sensing cable, the weighted length allows the user to clearly identify the area where a leak has occurred.


The **branching connector** enables the sensing cable to be branched. An **end termination** completes each branch. At the branching connector, the system first counts the sensing cable along the branch (middle connector) to its end termination, before it continues with the main run. Two built-in 4.5 m (15 ft) weighted-length resistors allow the user to clearly identify the leg on which a leak has occurred.

TTDM-128 Features

A

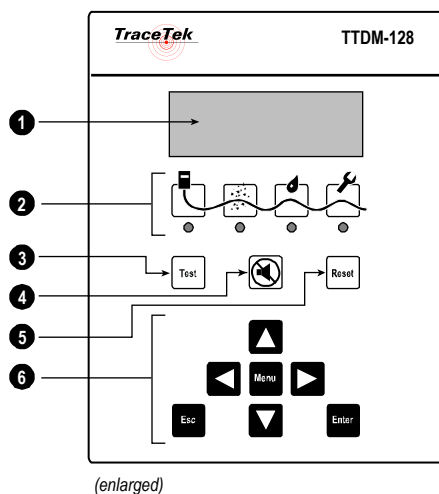

B

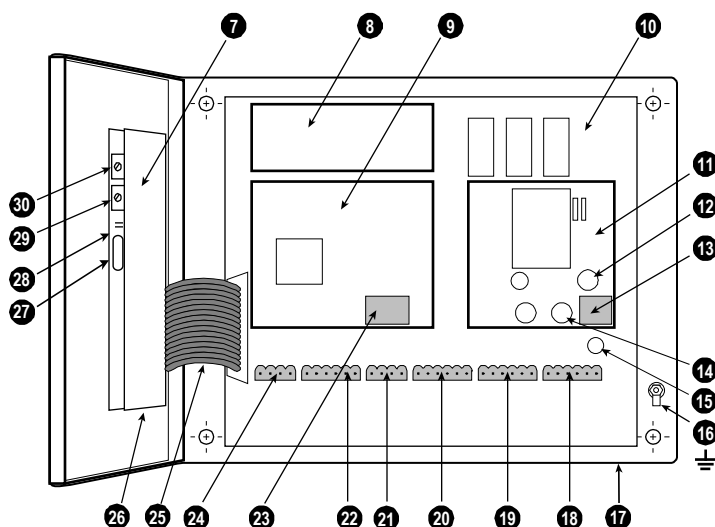

Identifying TTDM-128 Features


External View [A]

- ❶ LCD display gives up-to-date information regarding the condition of the system
- ❷ Icons and LEDs:
Monitoring LED - green
Service Required LED - Yellow
Leak LED - Red
Fault LED - Red
- ❸ (Self) Test key
- ❹ Silence key
- ❺ Reset key
- ❻ Menu keys

Internal View [B]

- ❼ User interface (UI) board
- ❽ 4-20 mA board (optional)
- ❾ Sensor Interface (SI) board
- ❿ Motherboard (MB)
- ⓫ Power supply board
- ⓬ Fuse (500 mA, 250 V)
- ⓭ Power cable terminal block (removable)
- ⓮ Voltage selector 110/220 volts
- ⓯ Spare fuse
- ⓰ Ground (earth) stud
- ⓱ Gland plate
- ⓲ Fault relay terminals (removable)
- ⓳ Leak relay terminals (removable)
- ⓴ Service relay terminals (removable)
- ⓵ 4-20 mA port terminals (removable)
- ⓶ RS-232/485 external communications serial port terminals (removable)
- ⓷ Sensing cable terminals (removable)
- ⓸ RS-485 TT-SIM network terminals (removable)
- ⓹ Ribbon cable
- ⓺ RS485/232 toggle switch
- ⓻ Test Port (DB-9 connector for temporary connection)
- ⓼ Reset pins
- ⓽ Volume adjustment
- ⓿ LCD contrast adjustment


The TTDM-128 Keypad

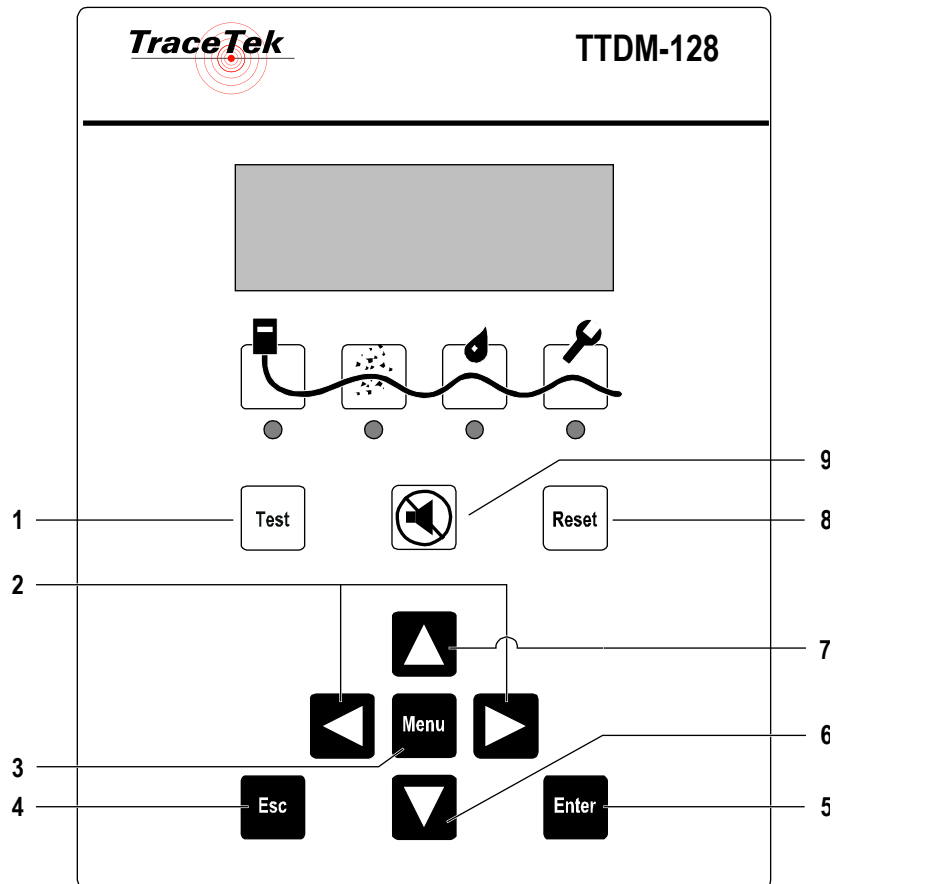

- 1. Test** Activates limited series of self-tests; additional self-tests are accessed through the menu (see page 28).
- 2. Left/Right arrow** In Current Events/Status display, manually select the channel displayed. When inputting numbers or text, select digit to change. In menus, act as express keys for going to the top or bottom of long scrolled lists.
- 3. Menu** Accesses menu of display and set-up options (see “Navigating the Menu Structure” on page 14).
- 4. Esc** Goes back (up) one level in menu structure.
HINT: Pressing **Esc** multiple times returns to the Current Events/Status display. From most menus, pressing **MENU** also returns to the Current Events/Status display.
- 5. Enter** Selects a menu option or enter a user supplied value.
- 6. Down arrow** In Current Events/Status display, accesses detailed System Status information for the channel currently displayed (see page 14 for details). In menu selections, scrolls down through displays and menu options. Change (decrease) digits or alpha characters when entering user supplied values.
- 7. Up arrow** Scrolls up in status displays and menu options. Change (increase) digits or alpha characters when entering user supplied values.
- 8. Reset** Resets the Leak alarm relay, including TTSIM-1A relays and TT-NRM relays.
- 9. Silence** Silences the audible alarm.

The TTDM-128 System Display

The icons represent the four conditions of the leak detection network. The LEDs indicate which conditions are currently active.

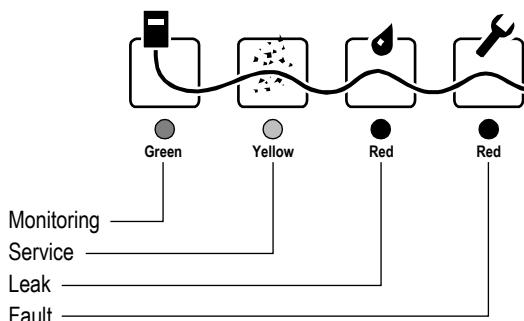

NOTE: The Service, Leak and Fault LEDs will illuminate if an alarm condition exists on any SIM. Multiple LEDs may be illuminated simultaneously to indicate multiple types of alarms, although the alarms could exist on different SIM channels.



MONITORING

This green LED indicates that the TTDM-128 is powered up.



SERVICE

The TTDM-128 is able to give advance warning of potential problems. The yellow Service LED illuminates to indicate that service is required on one of the sensing cables attached to the network. Note that the green Monitoring LED remains illuminated; the unit continues to monitor for leaks during a Service alarm.



LEAK

When liquid is detected, the red Leak LED illuminates. Note that the green LED remains illuminated; the unit continues to monitor for new leaks on all channels, as well as for changes to the detected leak.



FAULT

When the TTDM-128 module detects a fault — either a cable fault (break) or an electronics fault — the red Fault LED illuminates. After a fault on an individual SIM has been detected, the TTDM-128 module will, in most cases, continue to scan the remaining SIM units and their associated sensing circuits. However, some fault conditions may disable multiple channels or even the entire system. The TTDM-128 is unable to detect a leak on any channel affected by a fault.

IMPORTANT: Always investigate the cause of a Fault condition immediately.

NOTE: For more information on the various TTDM-128 alarm states, see the Event Response section of the manual on page 29.

Normal Operation

Current Event/Status Display

Line 1 CH01 SERVER ROOM
Line 2 LEAK AT 125 M
Line 3
Line 4 12 :30 21-01-2003

The LCD display is a backlit 4-line by 20-character display. If there is no activity for several minutes, the back lighting turns off, until a key is pressed.

Line 1	identifies the channel currently displayed, showing the SIM channel number and user-defined ID tag (up to 14 characters). For a new system, the user-defined label is blank until edited by the user (see page 5).
Line 2	indicates the current status of the SIM channel identified on Line 1, or In the case of Leak re-alarm, displays the initial leak location of the SIM channel identified on Line 1.
Line 3	may advise action or provide special instructions, or in the case of leak re-alarm, indicates the current status of the SIM channel identified on Line 1.
Line 4	displays the current time (in 24 hour format) and date; the colon blinks once a second, or in the case of Leak re-alarm may advise action or provide special instructions.

HINT: The LCD contrast may be adjusted (feature 30 in the diagram on page 11).


If no new alarm conditions exist, the LCD display scrolls through each connected SIM channel in sequence. The LCD presents the current event/status display for each channel for about 4 seconds, then continues to the next available SIM channel. Once the last SIM channel is displayed, the process starts again at the first channel.

If the TTDM detects a new Service, Fault, or Leak event, it immediately jumps the display to the SIM channel affected, turns on the LCD back light, and pauses at that channel number for several minutes.

NOTE: Use the left and right arrow keys to manually select the channel displayed.

Navigating the Menu Structure

Please refer to the “Menu Structure” diagram on page 16 for an overview of the TTDM-128 menu structure. Refer to the diagram on page 12 to locate the menu keys described below:

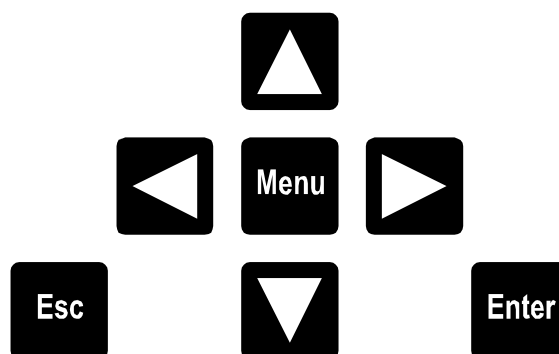

From the Current Event/Status display:

- ▶ Press the **LEFT** and **RIGHT** arrow keys to manually select the channel you require displayed.
- ▶ Press the **DOWN** arrow key to access detailed status information for the channel currently displayed described in detail on page 18.
- ▶ Press the **MENU** key to access the many display and setup features in the TTDM.
- ▶ Use **UP** and **DOWN** arrow keys to scroll through menu options and status displays.
- ▶ Use the **LEFT** and **RIGHT** arrow keys to select individual characters when entering data.
- ▶ Press **ENTER** to make a selection or go one level deeper into the menu structure.
- ▶ Press **Esc** to go back (up) one level in the menu structure.

NOTE: If the TTDM-128 is left in a menu display with no keypad activity for 30 minutes, it automatically returns to the Current Event/Status display.

MENU OPTIONS

The following are the options presented at the Main Menu level:

- Event History
- System Status
- General Setup
- Leak Setup
- SIM Network
- TTDM Network
- Self-Test

Each of these menu items is described in detail on the following pages.

ENTERING A PASSWORD

When a user attempts to change a restricted setting, the TTDM-128 displays a password prompt. The factory default password is 00010 (to change the password, see page 23). To enter the password, proceed as follows:

- Use the **LEFT** and **RIGHT** arrow keys to move to each digit.
- Use the **UP** and **DOWN** arrows to increase/decrease the selected number.
- Press **ENTER** when complete.

NOTE: Once the password is entered, it remains in effect (allowing access) until the user exits the main menu and returns to the Current Event/Status display, or until there has been no keypad activity for approximately 30 minutes.

Current Event/Status Display

Menu

---- Main Menu

- Events History
- System Status
 - SIM network
 - 1..current status
 - 2..current status
 - #...
 - NRM Network
 - 1..current status
 - 2..current status
 - #...
 - Leak
 - Service Req'd
 - Faults
 - Cable
 - SI Comm/Other
 - NRM Comm Error
 - UI Version
 - TTDM
- General Setup
 - Time/Date
 - Language
 - English
 - Francais
 - Deutsch
 - Espanol
 - Italian
 - Japanese
 - Password
 - **Special**
- Leak Setup
 - ReAlarmInt
 - Auto Reset
 - AudibleAlarm
 - Alarm Reflash
 - Alarm Reset
- SIM Network
 - Set SIM Address
 - Init Network
 - Update Network


TTDM Network

- Baud
- Modem
 - Auto Answer
 - Dial
 - Hang up
- 485 Address
- TTDM
 - **Master**
 - **Slave**
- Terminal
- Print Events


Self-Test

- UI Version
- Memory Tests
- SI Test
- 4-20 mA Test
- Display Test
- UI Relay Test
- Keypad Test
- Ext Comm Loop Test
- NRM Relay Test
- Ground Fault Test

Current Event/Status Display

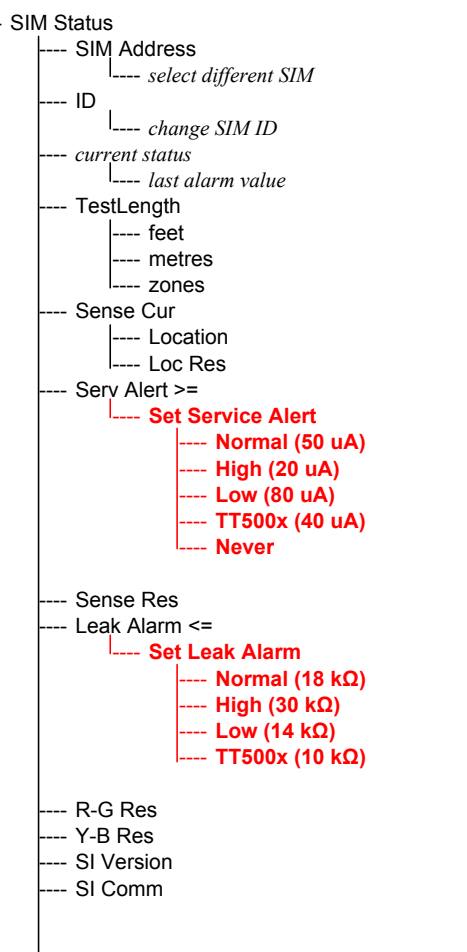

Add Regions/Relays

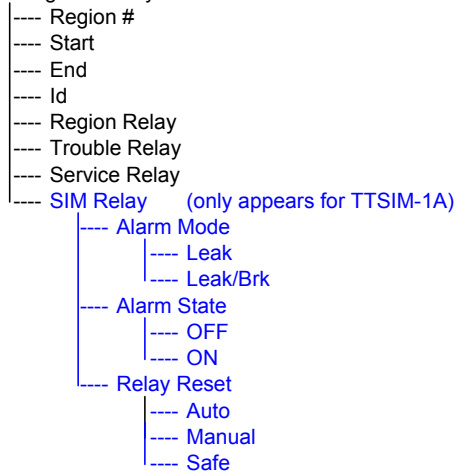

Legend:

normal text = menu item

italic text = variable data

bold text = password required

Status of Individual SIM channels

The TTDM-128 offers access to detailed real-time status information for each SIM channel. The status display for an individual SIM channel is accessed from the Current Event/Status display:

- ▶ If in a menu, press **Esc** one or more times (or press **MENU**) to return the Current Event/Status display.
- ▶ Use the **LEFT** or **RIGHT** arrow keys to select the SIM channel of interest.
- ▶ Press the **Down** arrow to access the detailed status information (as shown below) for the selected channel.

SIM Status	
SIM Address	<i>address</i>
ID	<i>user defined ID</i>
<i>SIM Status</i>	
TestLength	xxxx m
Sense Cur	xxx uA
Serv Alert >=	xx uA
Sense Res	xxxxx kΩ
Leak Alarm <=	xx kΩ
R-G Res	xxxxx Ω
Y-B Res	xxxxx Ω
SI Version	xxxx
SI Comm	xxx%
Add Regions/Relays	

NOTE: Only four lines are displayed at one time. Arrows in the scroll bar indicate if other entries can be accessed with the up or down arrow keys.

A description of each line on the SIM Status Menu appears below:

SIM Address	Channel number for information in current display
ID	An alphanumeric label specified by the user (maximum 14 characters).
SIM status	SIM Status can contain any of the following text, depending on the state of that SIM channel: ▪ SIM Normal ▪ Leak {location} ▪ Re-alarm [new location] ▪ Service Required [location] ▪ Leak cleared ▪ Cable break
Test Length	Total length of sensing cable attached to the selected SIM. The test length should be the same as that recorded when the channel was mapped. If the length is not the same, it may mean that the system was modified (sensing cable was removed or added). NOTE: The Test Length is typically about 1% longer than the physical or mapped length for the channel; this is normal.

Location	The current location — or electrical center — of the leak (or cause of a Service alarm). If the SIM status is Normal, the Location entry is blank.
Sense Cur	This current (measured in μA) indicates the condition of the sensing cable. If a leak is detected in the channel, this rises to 270 μA or more (depending on the type of TTSIM). In a clean, leak-free sensing circuit, the current should be 5 μA or less. If the current rises above 20 μA , service is recommended, as it may indicate the presence of contamination.
Serv Alert >=	This setting controls Service Required Alarms. If Sense Cur is greater than this value, the TTDM signals a Service Alarm.
Sense Res	This is the resistance measured between the sensing wires. For a clean, leak-free sensing circuit, this resistance is more than 20000 k Ω . If liquid is detected, it will drop to less than 30 k Ω . If the resistance is changing, it may indicate an event in progress.
Leak Alarm <=	This setting controls Leak Alarms. If Sense Res drops below the threshold level, the TTDM signals a Leak Alarm.
R-G Res, Y-B Res	These are the resistances of the Red-Green and Yellow-Black loops in the TraceTek sensing circuit. If these values are significantly different from each other, the TTDM will signal a Loop Imbalance alarm, indicating damage to a sensing cable or connector.
SI Version	This indicates the software version operating in the SIM microprocessor.
SI Comm	This indicates the success rate (in percent) for communications between the TTDM-128 and the SIM channel selected. A value below 90% may indicate a faulty connection or damaged RS-485 cable.
Add Regions/Relays	This menu item accesses a submenu that lets the user divide a length of sensing cable into as many as 10 smaller logical sections (regions) and assign relays to those regions. Dividing a length of cable into regions can help the user identify the location of an alarm condition. By assigning relays to regions, it is also possible to create a wide range of alarm actions depending on the region and sensor condition. See Setting Up Regions, page 21.

Modifying Settings for Individual SIM Channels

To change the alphanumeric tag for the selected SIM channel:

- ▶ Select the appropriate SIM channel as described previously in this section.
- ▶ Use the **DOWN** arrow key to select ID, then press **ENTER**.
- ▶ Use the **LEFT** and **RIGHT** arrows to select a character position to modify.
Tip: Use the **RESET** key to “tab” between Letters, Numbers, and blank.
- ▶ Use the **UP** and **DOWN** arrows to cycle through all available characters until the desired character is displayed. There are numerous punctuation, currency, Katakana, and non-English alphabetical characters available. Going “up” or “down” cycles through all available characters.
- ▶ Press **ENTER** once the label has been set up as desired.

To change the length units for the selected SIM channel:

- ▶ Select the appropriate SIM channel as described previously in this section.
- ▶ Use the **DOWN** arrow key to select Test Length, then press **ENTER**.
- ▶ Use the **DOWN** arrow key to select the desired units, then press **ENTER**.

CHOOSING APPROPRIATE LEAK ALARM AND SERVICE REQUIRED LEVELS.

Leak sensitivity and Service Required levels should be based on the type of liquid being detected and the environment in which the sensing cable is installed.

- Normal (default) for most applications.
- High for de-ionized water.
- Low for particular active or exposed applications.
- TT500x for systems using hydrocarbon-sensing cable (TT5000, TT5001) to monitor doublewall pipes and tanks.
- Never (only available for Service Required setting) to disable the Service Alarm.

NOTE: Password is required to change leak and service sensitivity settings.

To change the leak alarm sensitivity:

- ▶ Select the appropriate SIM channel as described previously.
- ▶ Use the **DOWN** arrow key to select Leak Alarm <=, then press **ENTER**. If a password is requested, input the value 00010 then press **ENTER**.
- ▶ Use the **UP/DOWN** arrow keys to choose a sensitivity level (Normal, High, Low or TT500X), then press **ENTER**.

To change the Service Required setting:

- ▶ Select the appropriate SIM channel as described previously.
- ▶ Use the **UP/DOWN** arrow keys to select Serv Alert >=, then press **ENTER**. If a password is requested, input the value 00010 then press **ENTER**.
- ▶ Use the **DOWN** arrow key to choose a Service Alert level (Normal, High, Low, TT500X, or Never).
- ▶ Press **ENTER**.

SETTING UP REGIONS AND RELAYS

For some systems, it may be helpful to divide a circuit of sensing cable into regions. In addition, regions are sometimes useful in setting up TT-NRM relay actions.

When a length of sensing cable is divided into regions, the TTDM will identify the region in which a Service or Leak event occurs. Each region represents a section of the entire length of sensing cable. Regions are defined by a low limit (starting distance) and a high limit (ending distance). Regions can contain the entire circuit, or only a part of the circuit, and they may overlap each other.

To create regions for a circuit (repeat for each desired region):

- ▶ Select the appropriate SIM channel.
- ▶ Use the **DOWN** arrow key to select Add Regions/Relays, then press **ENTER**.
- ▶ Select Region No. from the menu and press **ENTER**.
- ▶ Use the arrow keys to select a region (1-10) and press **ENTER**.
- ▶ Select Start from the menu and press **ENTER**. This value represents the starting distance for the region. Using the arrows, enter a low limit and press **ENTER**.
- ▶ Select End from the menu and press **ENTER**. This value represents the ending distance for the region. Using the arrows, enter a high limit and press **ENTER**.
- ▶ Select ID from the menu and press **ENTER**. Using the arrows, assign the region an alphanumeric tag and press **ENTER**.

If a TT-NRM is connected and will be utilized with this region, continue as follows.

NOTE: Each TT-NRM relay can only be assigned to a single region and a single function.

- ▶ Select Region Relay and press **ENTER**.
- ▶ Using the arrows, assign the relay to be activated for a Leak Alarm. Press **ENTER**.
- ▶ Repeat this process for the Trouble Relay and Service Relay.

If the SIM is a TTSIM-1A or TTSIM-2, continue as follows:

- ▶ Select SIM Relay and press **ENTER**.
- ▶ Select Alarm Mode and press **ENTER**. Select Leak if you want the relay to activate only on leak alarm, or select Leak/Brk if you want the relay to activate for any sensor alarm condition, then press **ENTER**.
- ▶ Select Alarm State and press **ENTER**. Select OFF if you want the relay to be normally energized and de-energized for alarms, or select ON if you want the relay to be normally de-energized and energized for alarms. Press **ENTER**.
- ▶ Select Relay Reset and press **ENTER**. Select the appropriate reset mode, then press **ENTER**:
 - Auto: the relay will reset when the TTDM Reset key is pressed (regardless of the current alarm condition), or it will automatically reset when the alarm condition clears.
 - Manual: the relay will reset only when the TTDM Reset key is pressed. The relay will reset regardless of the current alarm condition.
 - Safe: the relay will reset only when the alarm condition has been cleared and the TTDM **RESET** key is pressed.

NOTE: TTSIM-1A and TTSIM-2 relays will activate for any leak on the circuit, regardless of region definitions.

Region setup example:

Region No.	1	2	3	4
Low Limit	0 m	251 m	501 m	751 m
High Limit	250 m	500 m	750 m	1,000 m
ID	Room A	Hall	Room C	Room D
Region relay	50-01	50-02	50-03	50-04
Trouble relay	50-06	50-06	50-06	50-06
Service relay	50-07	50-07	50-07	50-07

Events History Log

One extremely useful function provided by the TTDM is the ability to record a series of events. The TTDM module keeps track of a list of up to 1,024 events (if 1,024 events are already stored, the oldest event is discarded as a new event is recorded). Events in the events history log may be specific to one SIM channel or may refer to the TTDM itself (such as user interactions). For a full list of event types, please refer to “Appendix 1 - Events Glossary”.

ACCESSING THE EVENTS HISTORY LOG

- From the Current Events/Status display, press **MENU**
 - Use the arrow keys to select Events History, then press **ENTER**.
 - Use the **UP** and **DOWN** arrow keys to scroll through the events history log. The events will be displayed in chronological order, with the most recent event displayed first.
- HINT:** To quickly move to a view of the most recent event, press the **LEFT** arrow key. To move to the oldest event, press the **RIGHT** arrow key.

TYPICAL TTDM EVENT DISPLAY

Events History
Alarm Silenced
HH:MM DD-MON-YYYY

TYPICAL SIM EVENT DISPLAY

Events History
CH01 USER_LABEL_0001
Leak 237 ft
HH:MM DD-MON-YYYY

An arrow at the bottom right-hand corner indicates that there are further events “below” (occurring before) the one being displayed.

Detailed Setup

General Set-up

Access the General Set-up menu from the Main Menu. The General Set-up menu has the following sub menus:

- Time/Date
- Language
- Password
- Special (High level password required to see this menu)

TIME/DATE

Use the **LEFT** and **RIGHT** arrow keys to select each digit. Use the **Up/Down** arrow keys to increase or decrease the number.

LANGUAGE

Select from available options (English, Français, Deutsch, Espanol, Italian and Japanese).

PASSWORD

Entering a Password

When the user attempts to change a restricted setting, a password prompt appears.

- ▶ Use the **LEFT** and **RIGHT** arrow keys to move to each digit.
- ▶ Use the **Up** and **Down** arrow keys to increase or decrease the number.
- ▶ Press **ENTER** when complete.

The TTDM is supplied from the factory with the password 00010.

Changing the Password

- ▶ Enter the old password if requested.
- ▶ Enter the new password (using the arrow keys) and press **ENTER**.

HINT: If password protection is not required, set the password to 00000. After that, you will not be prompted for a password.

Leak Setup

The Leak Setup menu has the following submenus:

- ReAlarm Int (Re-Alarm Interval)
- Auto Reset
- AudibleAlarm
- Alarm Reflash
- Alarm Reset

These parameters determine the alarm setting for all SIMs. Password entry is required to change them.

RE-ALARM INTERVAL

The TTDM can be set to re-alarm automatically if the alarmed event has not been cleared after a certain length of time.

- allowed range: 0 – 24 hours (default = 0)

HINT: Use this to automatically alert the next shift when the system has an uncleared event (leak, cable break/fault, or service required).

AUTO RESET

The TTDM is factory set to require a manual reset following a leak event. This allows the user to verify that any equipment connected to the Leak relay is ready to be switched back to its normal state. Note that this setting is independent from the TTSIM-1A/TTSIM-2 relay reset mode.

If Auto Reset is set to “On,” the leak relay will automatically reset as soon as the leak has been cleared.

- choices: Off / On (default: Off)

AUDIBLE ALARM

The audible alarm may be disabled if not required. See feature 29 on page 11 to adjust the volume.

- choices: Off / On (default: On)

ALARM REFLASH

The alarm reflash option causes the leak alarm relay contacts to revert to their no-alarm state for approximately 5 seconds then return to the alarm state whenever an additional leak occurs before an existing leak is cleared. This is useful when a multi-channel system is connected to a host computer via a simple relay-only interface. Reflash will typically cause the host computer to log each new leak event as it occurs whether or not preceding events have been cleared.

- choices: Off / On (default: Off)

ALARM RESET

This parameter determines whether all SIM channels will be reset simultaneously when the Reset key is pressed (All setting), or only the currently displayed SIM channel will be reset (Single setting).

- choices: Single / All (default: Single)

SIM Network

The SIM Network menu has the following submenus:

- Set SIM Address
- Init Network
- Update Network

SET SIM ADDRESS

This command allows the user to assign a new address to either the TTDM's internal SIM or an external TTSIM. This function is vital to starting up a new leak detection network. To assign an address to a TTSIM, it must be connected to the TTDM and able to communicate with it.

IMPORTANT: Be sure to assign a unique SIM address, or communications problems will result.

To set SIM or TTSIM addresses, the SIM/TTSIM to be addressed must be set to the configure mode. This is accomplished by placing a jumper on the CFG pins (J1 on the TTDM's internal SIM – see TTDM-128 Installation Instructions for details; refer to the appropriate TTSIM installation instructions for details regarding external TTSIM's). Note that only 1 SIM or TTSIM can be set to CFG at a time. After setting the address, you must remove the CFG jumper before proceeding to the next SIM/TTSIM.

To add a new TTSIM to the leak detection network and assign it an address

- ▶ Install and connect the TTSIM in accordance with the TTSIM Installation Instructions that accompanied it.
- ▶ Install the CFG jumper on the TTSIM.
- ▶ Press the **MENU** key to access the main menu.
- ▶ Select SIM Network and press **ENTER**.
- ▶ Select Set SIM Address and press **ENTER**.
- ▶ Select New Address and press **ENTER**.
- ▶ Use the arrow keys to set the new address to an unused address between 001 and 127 (note that address 001 is the factory default for the TTDM's internal SIM) and press **ENTER**.
- ▶ Remove the CFG jumper clip from the TTSIM, then press **Esc** twice on the TTDM.
- ▶ Repeat as necessary for each TTSIM added to the network.

To add a new TT-NRM to the leak detection network and assign it an address

- ▶ Install and connect the TT-NRM in accordance with the Installation Instructions that accompanied it.
- ▶ Using the switches on the TT-NRM base unit, select a unique address (see TT-NRM Installation Instructions). The address must not be used by any other device on the network.
- ▶ Power up the system and perform a network Update or Initialization (see INIT NETWORK and UPDATE NETWORK, page 26).
- ▶ Configure relay assignments (see SETTING UP REGIONS AND RELAYS, page 21).

UPDATE NETWORK

Use this command to update the TraceTek network when TTDM, TTSIM or TT-NRM units have been added and assigned unique addresses (this is not necessary when TTSIM's are added and addressed using the TTDM Set SIM Address menu - see page 5). When activated, this command immediately searches all possible addresses to determine what equipment has been connected. The current event status of all devices will be maintained by this command.

NOTE: Use the INIT NETWORK command to reset all current event status information.

- ▶ Select SIM Network and press **ENTER**.
- ▶ Select Update Network and press **ENTER**.

INIT NETWORK

Use this command to initialize the TraceTek network once all TTDM, TTSIM and TT-NRM units have been connected and assigned unique addresses. When activated, the Init Network command immediately searches all possible addresses to determine what equipment has been connected. The current event status of all devices will be reset by this command.

NOTE: Use the Update Network command to update an existing network without resetting the status of existing SIM's.

- ▶ Select SIM Network and press **ENTER**.
- ▶ Select Init Network and press **ENTER**.

IMPORTANT: For Master/Slave networks, the TTDM-128 configured as the Slave device must be initialized or updated before the Master unit.

TTDM Network

Access the TTDM Network menu through the Main Menu. The TTDM Network menu has the following submenus:

- Baud
- Modem
- 485 Address
- TTDM
- Terminal
- Print Events

These parameters affect only the serial port for external communications (features 22, 26 & 27 in the diagram on page 11). The first four submenus require password entry.

BAUD

Use this option to select the baud rate of the external communications (host) serial port. Standard values are from 600 to 19200 baud are available. Default is 9600.

MODEM

This menu item provides access to three submenus:

- Auto Answer causes a text string to be sent to the external serial port, which will set a Hayes compatible modem to auto answer mode.
- Dial allows the user to program an 11-digit numerical string into the menu.
- Hang-up allows the user to send a hang-up command to an external modem attached to the serial port.

485 ADDRESS

When more than one TTDM is connected to a host computer on an RS-485 network, each TTDM unit must be assigned a unique address. This menu allows the user to assign the TTDM an RS-485 address (the default address is 1). An address of 1 through 20 hex can be selected, however, 20 should be reserved for testing only. Using addresses 1 through 1F hex allows as many as 31 TTDM's on one network.

TTDM

Use this menu to select this module to be a Master or Slave.

TERMINAL

Use this option to view a one-line display of characters being sent to or received from the TTDM external communications serial port. This function is used to verify communications during system start-up.

PRINT EVENTS

Use this menu selection to send an ASCII text message through the serial port to an attached serial device (either a directly connected PC running a terminal-emulation program, a serial printer, or a modem). This function allows the user to download all events in the Event History Log for later analysis. Do not use this when connected to a Modbus network, as it may disrupt communications.

Self-Test

The Self-Test menu provides access to specific user-selected test routines:

- UI Version
- Memory Tests
- SI Test
- 4-20 mA Test (see “Appendix 2 - Connection to Other Devices” for details)
 - Electronics Fault
 - SI Comm Error
 - Cable Break
 - Loop Imbalance
 - Service Req’d
 - System Normal
 - Leak (user selects location)
 - 20 mA Val (user selects location)
 - 4-20 mA SIM
- Display Test
- UI Relay Test (tests the TTDM's internal relays)
- Keypad Test
- Ext Comm Loop Test (see “Appendix 2 - Connection to Other Devices” for details)
- NRM Relay Test (tests the relays on any connected TT-NRMs)
- Ground Fault Test

The Self-Test menu is password-protected to prevent inadvertent emergency response activity, because in many installations the leak relay or 4-20 mA output may be connected to external systems. Always notify the appropriate response personnel before using the Relay Test or 4-20 mA Test to alter their outputs.

The first three tests are also accessed by pressing the Test key when the display is in the Current Event/Status Display mode. This key is not password protected.

Event Response

Leak Detection and Location Events

A LEAK ALARM

When liquid is detected by a sensor in any channel, the following occur:

- The audible alarm sounds (If audible alarms are not required, the module can be set to disable them - see page 24).
- The red Leak LED illuminates.
- The display changes to show the channel and location of the leak.

```
CH01 USER_LABEL_0001
```

```
Leak 504 m
```

```
hh:mm DD-MMM-YYYY
```

- The interfaces signal the event (Leak relay, 4-20 mA, and serial port)

The following actions should then be taken:

- ▶ Silence the alarm (if necessary).
- ▶ Locate the leak and clear the system.
- ▶ Reset the leak relay. (This occurs automatically if Auto-Reset is enabled; see page 24.)

TO LOCATE THE LEAK

Using the channel number and location displayed by the TTDM-128, refer to the system map and determine where the leak was detected.

TO CLEAR THE SYSTEM

Fix the leak and clean up the area affected. Then clean and dry the sensing cable (in the case of TT1000 and TT3000) or replace the affected section (TT5000/TT5001 series). Once the sensing cable is clear, the module responds and the display changes:

```
CH01 USER_LABEL_0001
```

```
Leak Cleared
```

```
Press reset
```

```
hh:mm DD-MMM-YYYY
```

Notice that the red LED remains on. This indicates that the leak relay is still in the alarm state.

TO RESET THE LEAK RELAY

In order to reset the leak relay and return the module to the "SIM Normal" state, press the Reset button. Before doing so, check that any external equipment controlled by the leak relay is ready to be reset.

Once the **RESET** button is pressed, the relay returns to normal, the red Leak LED extinguishes, and the LCD returns to the normal display.

HINT: If manual reset is not required, the TTDM-128 can be set to auto-reset; see page 24.

Service Events

INTRODUCTION

A TraceTek sensing circuit consists of two electrical loops. The SIM module constantly monitors for current passing between loops. When the system is normal, there is no current passing between the loops.

When there is a leak on the system, the maximum current flows. If a SIM detects a lower but significant level of current flow between the loops, the TTDM will signal a Service Alarm.

A low-level current could indicate one or more of the following:

- A very small leak (which may soon develop into a full leak alarm).
- Heavy condensation or small spills (coffee, tea, etc.) on a water or aqueous solutions sensing cable (TT1000 and TT3000 for example).
- Conductive material on a water or aqueous solutions sensing cable. The material might be metal filings, concrete dust, flux, mastic, or other construction debris, or carbon-based dust from air-handling units, printers, or copiers.

While service alarms should be investigated, they do not threaten the operation of the system. The TTDM and TTSIM will continue to detect leaks during a service alarm. However, service alarms may affect the accuracy of leak location in certain cases.

THE SERVICE ALARM

When the TTDM detects a condition requiring service (such as described above), it signals the event by taking the following actions:

- Sounds an intermittent beep.
- Illuminates the yellow Service LED.
- Switches the service relay to alarm state.
- Changes the LCD display to the following:

```
CH01 USER_LABEL_0001
Service Req'd [147]
hh:mm DD-MMM-YYYY
```

The number in square brackets indicates the estimated location of the material causing the alarm. The number is shown with square brackets to indicate that the value is only an estimate.

HINT: Because the cause (concrete dust, for example) of low-level current may be distributed over a long length of sensing cable, it is not always possible for the TTDM-128 to report an accurate location. However, the indicated location is always a good point from which to begin a troubleshooting procedure.

The following actions should be taken:

- ▶ Silence the audible alarm.
- ▶ Clear the cable.

NOTE: When the cable is cleared, the yellow Service LED, the alarm relay, and the LCD display will automatically return to their normal (non-alarm) state. No reset is required.

TO CLEAR THE CABLE

Investigate the cause of the alarm and conduct cleanup or maintenance accordingly.

HINT: If material causing a service alarm is spread throughout the system, it is often useful to subdivide the system; see INVESTIGATING LEAKS AND FAULTS on page 35 for further information.

Fault Events

INTRODUCTION

Several conditions could lead to a fault alarm:

- A cable is disconnected.
- A cable is damaged.
- A connection is damaged.
- A specific SIM module is damaged.
- Communication is lost between the TTDM-128 and one or more SIM modules.

WHAT THE TTDM-128 MODULE DOES

The following shows how the alarm display would appear if the fault were caused by a broken or disconnected cable:

```
CH01 USER_LABEL_0001  
Cable Break  
hh:mm DD-MMM-YYYY
```

The TTDM-128 would display a different message for a different type of fault, such as a loop imbalance or loss of communication to a specific SIM module.

When a fault condition is detected, the following occur:

- An audible alarm sounds.
- The red Fault LED illuminates.
- The LCD displays a message appropriate to the fault condition.
- The interfaces signal the event (Fault relay, 4-20 mA, and serial port).

TO REMEDY THE PROBLEM

Find the problem and rectify it. This may mean reconnecting the cable, or finding the damaged section and replacing it. If the cause of the fault is not obvious by visual inspection, it is often useful to subdivide the system and test individual sections with a TraceTek Portable Test Box.

As soon as the fault is rectified, the relay, LED, and LCD display return to their normal state.

Multiple Events

SIMULTANEOUS EVENTS ON DIFFERENT SIM CHANNELS

The TTDM-128 is capable of monitoring many sensing circuits. Each SIM operates independently of other SIMs in the leak detection network. The TTDM-128 tracks information for all SIM channels and is capable of handling multiple events that occur in the same time frame. Any new event takes precedence on the LCD display. The LCD display will pause temporarily on the most recent event, giving the local operator time to read the LCD message and take action. After pausing several minutes on the most recent event, the TTDM-128 display resumes automatic scrolling through each connected SIM channel.

At any time, the operator may manually select a channel by using the left or right arrow keys. When a channel has been selected manually, the display pauses on the selected channel for several seconds before scrolling resumes.

MULTIPLE EVENTS ON A SINGLE SIM CHANNEL

In some circumstances, multiple events may occur on a single SIM channel. The system continues to monitor during Service and Leak alarms, ensuring that the installation provides full-time protection. The TTDM-128 stores all events in memory, and in addition, updates the display based on the sequence of events in a SIM channel.

MOVING LEAK

The TTDM will re-alarm when the leak moves more than the re-alarm distance, for which the default is 2 m (5 ft). The audible alarm will sound, the third line of the LCD will change, and a new event will be added to the Events History.

Example: suppose an initial leak is detected at 110 m. The TTDM would display:

```
CH01 USER_LABEL_0001
Leak 110 m
hh:mm DD-MMM-YYYY
```

Suppose also that before repairs can be made, the leak spreads. Once the module has detected significant movement of the leak, the TTDM-128 module goes into alarm once again:

```
CH01 USER_LABEL_0001
Leak 110 m
Re-Alarm 115 m
hh:mm DD-MMM-YYYY
```

The LCD now displays the first leak (on the second line of the display) and the most recent alarm on the third line. The first leak recorded on the SIM channel is likely to be close to the source of the leak. The most recent leak shows the current “electrical center” of the liquid (essentially a weighted average). If the Re-Alarm location is relatively close to the first (as in the example above), it is likely that the leak has spread.

Should the leak continue to spread, the TTDM would re-alarm again and the re-alarm location is updated accordingly:

```
CH01 USER_LABEL_0001
Leak 110 m
Re-Alarm 120 m
hh:mm DD-MMM-YYYY
```

HINT: Use the Events History to track the events between the “first leak” and the “most recent event.” See “The Events History Log” section on page 22.

ADDITIONAL LEAK

If liquid contacts sensing cable at a significant distance from the initial leak, the module will re-alarm however it will indicate that this realarm leak distance could be caused by a new leak rather than a growing leak. In this case, the TTDM shows the re-alarm location in square brackets:

```
CH01 USER_LABEL_0001
Leak 370 m
Re-Alarm [205]
hh:mm DD-MMM-YYYY
```

Brackets indicate that the value shown requires interpretation; when an additional leak occurs, the value represents the “electrical center” of the leaks.

SERVICE-TO-LEAK ALARM

Although the TTDM-128 and TTSIM system can continue to monitor a channel when a Service Required alarm is in effect, the accuracy of location may be impaired.

Example:

```
CH01 USER_LABEL_0001
Service Req'd [257]
hh:mm DD-MMM-YYYY
```

If sensing cable on that SIM channel detects a full-fledged leak before service is performed, the TTDM-128 displays a new leak alarm. If the location measured is nearly the same as the earlier Service Required alarm, the display would appear as below:

```
CH01 USER_LABEL_0001
Leak 257 m
hh:mm DD-MMM-YYYY
```

If the leak location is different from the earlier Service Required alarm, the TTDM-128 shows a slightly different display:

```
CH01 USER_LABEL_0001
Leak [190]
hh:mm DD-MMM-YYYY
```

The TTDM-128 indicates the uncertainty about the leak location (due to the prior Service Required alarm condition) by showing the location in brackets.

Maintenance

CLEANING THE MODULE

To clean the outside surface, use a damp cloth or sponge. Do not use solvents or abrasive cleaners and do not open the enclosure while it is wet (it is an electrical device).

FUSE REPLACEMENT

The fuse on the power supply board of the TTDM-128 and TTSIM units is a 200-mA, 250-V, quick-acting microfuse. It has an F1 rating, characteristic code F (quick-acting). Use no other type of fuse or the TTDM could be damaged or could fail to perform properly. One spare fuse is provided in the TTDM (see feature 15 on page 11).




ROUTINE MAINTENANCE

It is recommended that the TraceTek system be thoroughly checked twice a year. Such a check will identify conditions that adversely affect the leak-locating capability of the system. More frequent checks may be required if the sensing cable is repeatedly exposed to leaks, or may be exposed to abuse due to construction or repair work. Contact your local TraceTek representative for further information on service support.

STORAGE AND HANDLING OF SENSING CABLE

Despite their rugged construction, TraceTek sensing cables must be handled in a manner appropriate for a sensing device or they may be damaged and require replacement. Therefore, you should follow some basic rules for storing and handling all TraceTek sensing cables:

- Store spare cable in its original container in a clean, dry place until ready for installation.
- Schedule cable installation after all mechanical, plumbing, and electrical work has been completed.
- Clean the area where the cable is to be installed, and remove any obvious debris or other sources of contamination.
- Do not solder or weld near the cable without providing protection from heat, solder flux, or weld splatter.
- Do not drop tools or floor tile on the cable; sharp or heavy objects may damage the cable.
- Avoid walking or stepping on the cable. Provide shielding (for example, a half shell of plastic pipe) where additional protection is necessary.
- Do not use tape to secure sensing cable (some tapes and adhesives absorb moisture) or use solvents that could eventually cause an alarm.
- Do not drag sensing cable through contaminants (such as pipe dope, PVC cement, solvents, oil, or dirt).

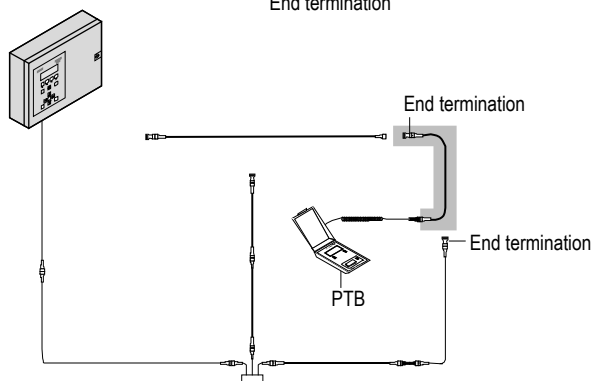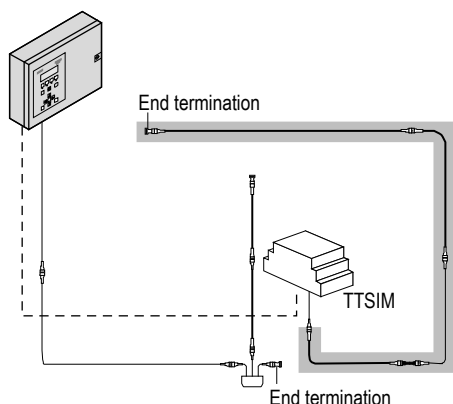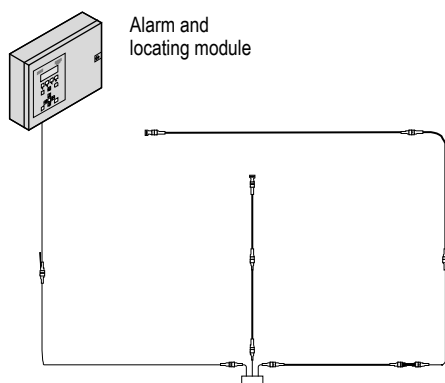

INVESTIGATING LEAKS AND FAULTS

If the location of a leak is not apparent, it is often useful to subdivide the leak detection circuit. To accomplish this, it is best to have a TraceTek Portable Test Box (PTB) or extra TTSIM, and an extra Modular End Termination. Contact your local TraceTek representative to obtain these products.

To subdivide the system and isolate the problems, find a connection at a convenient point somewhere near the center of the detection circuit. You can then use a PTB or add an additional TTSIM to test the “back half” of the sensing circuit (to verify circuit integrity, and to detect the presence of liquid and determine its location). If you install an end termination on the “front half” of the circuit (going back to the existing module), you can use that module to check the “front half” of the sensing circuit.

If you add a new TTSIM to the leak detection network (by connecting it to the RS-485 wiring connected to the TTDM-128), follow the Set SIM Address instructions on page 5 then perform an Update Network command (page 26). Examine the SIM Status of the new (“front half”) and old (“back half”) channels, and compare with the SIM Status of the former combined sensing circuit.

You can further subdivide the circuit, and even test individual lengths of cables. Even the most perplexing problems can usually be isolated and resolved using this methodical approach. If you wish to remove SIMs, remember to use the Init Network menu.

Appendix 1 - Events Glossary


Type of Event	Message	Description
Power	Power Down	The time the power was last supplied to the TTDM-128 is stored in nonvolatile memory and is entered into the Events History log when power is restored.
	Restart	The Events History log records when power is supplied to the unit or when the unit is manually restarted.
Leak	Leak	Liquid detected at the displayed channel and location.
	Re-Alarm	Occurs under three different situations: • Location changed past Re-Alarm threshold. • New leak location is more than 8 m (25 ft) from the last stored location on the channel (new average is shown in brackets). • Automatic Re-Alarm after the Re-Alarm interval (a user setting) if the leak condition still exists.
	Leak Cleared	Displayed when channel status returns to normal after a leak is cleared.
	New Leak	A new leak on a channel is detected after an earlier leak is cleared but before the leak relay is Reset.
Fault	Cable Break	Loss of continuity in both loops of the sensing circuit. May be caused by broken or disconnected sensing cable, jumper cable, or connections.
	YB Loop Break	Break in the Yellow/Black loop of the sensing cable.
	RG Loop Break	Break in the Red/Green loop of the sensing cable.
	Loop Imbalance	Resistance of the two cable loops indicates more than 25% difference in measured resistance. May be early indication of cable deterioration or damage, or electrical contact of one sensing wire with a ground (earth) path.
	Cable Restored	Displayed when cable returns to normal after any fault condition.
	SI Comm Error	Communications problem between TTDM-128 unit and any installed SIM channel.
	SI Comm Recovered	Displayed when communication with SIM unit is re-established.
	SI H/W Error	A self-test of the SIM unit has failed. The unit needs to be repaired or replaced.
	SI H/W Recovered	Displayed after a SIM hardware problem has been corrected.
Service	Service Required	A small amount of current is flowing between the two sensing wires in the sensing cable. This is usually caused by a very small leak or buildup of contaminants. The TTDM-128 may indicate a location in brackets if it can obtain consistent measurements.
	Service Clear	Displayed when the condition requiring service has been cleared (for example, the sensing cable is clean and dry).
User Action	Settings Changed	Whenever any user-setup parameter is changed, the event is logged in the Event History.
	Alarm Silenced	User pressed the silence button.
	Reset	User pressed the reset button, or the system performed an automatic reset (if configured for Auto Reset).

Appendix 2 - Connection to Other Devices

NOTE: All connections to external devices are made at the TTDM-128.

RELAYS

TTDM-128 has three relays: Service, Leak and Fault:

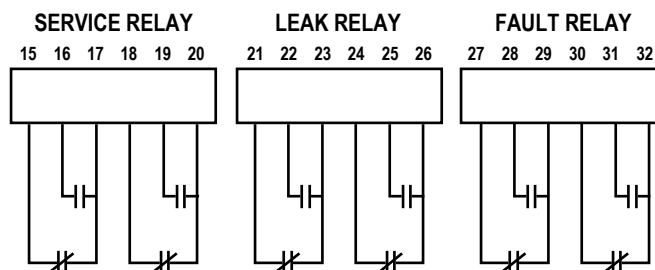


Relay Logic

Each relay provides two Form-C relay contacts, with normally open and normally closed contacts both provided. The relays are de-energized to indicate an alarm condition. The diagram below shows the relay status when each is in an alarm (de-energized) state.


Wiring Options to Gang Alarm Relays on a Single Pair of Wires

The following illustrations show how the relays can be jumpered together to allow remote monitoring of the TTDM-128 system status with only a single pair of wires. The TTDM-128 de-energizes its relays to signal an alarm condition. Therefore, loss of power as well as any other type of alarm would trip the remote alarm.

Open on Alarm

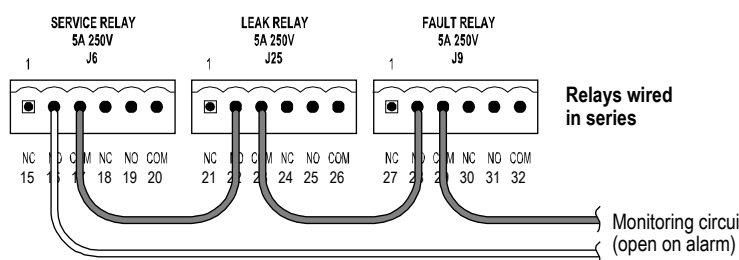

Close on Alarm

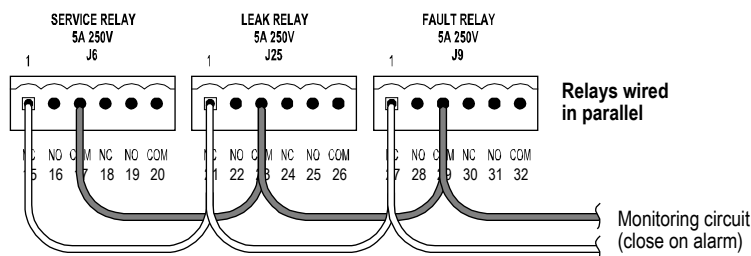

OPTIONAL 4-20 MA INTERFACE

The TTDM-128 can be equipped with an analog 4-20 mA interface which can communicate the status of a selected SIM channel. The TTDM-128 adjusts its current output based on whether an alarm condition exists in the selected channel, and (when a leak is detected) on the location of the leak.


The 4-20 mA current output is isolated from the sensing circuit and therefore requires an external DC power supply (26.4 V maximum). The maximum loop resistance (R_{max}) is determined according to the power supply voltage:

V_{dc}	R_{max}
24	900 ohms
18	600 ohms
12	300 ohms

4-20 mA Wiring

Before wiring the external equipment to the TTDM, check that jumpers J11 and J12 "OPTION PCB INT PWR JMPRS" on the TTDM Mother Board are **not** installed.

The 4-20 mA output port is connector J2 on the TTDM-128 motherboard. The external power supply and monitoring device can be connected as per either of the following diagrams:

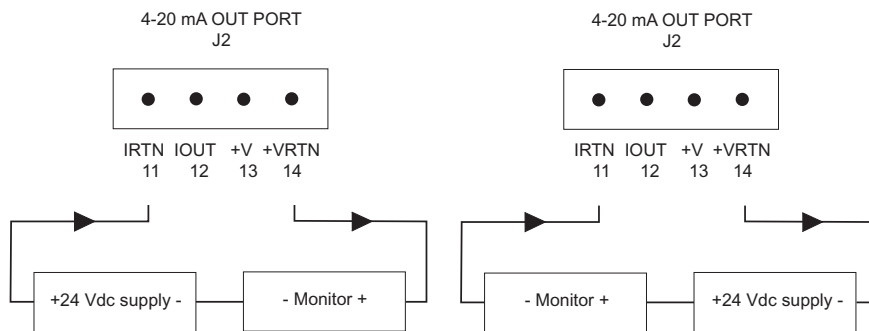

Configuration

The 4-20 mA interface communicates the status of a single SIM channel. The default SIM channel is the TTDM-128 internal Sensor Interface board (channel 1). The module's output can be scaled to make full use of the 4-20 mA range for the length of sensing cable connected to the selected SIM channel.

To change the leak location scaling:

- ▶ From the Current Event/Status Display, press **MENU**.
- ▶ Use the **DOWN** arrow key to select Self Test, then press **ENTER**.
- ▶ Use the **DOWN** arrow key to select 4-20 mA Test, then press **ENTER**.
- ▶ Use the **DOWN** arrow key to select 20 mA Val, then press **ENTER**.
- ▶ Use the arrow keys to input the desired full scale length that will equate to a 20 mA output, then press **ENTER**. Normally this will be the Test Length value - see page 18.
- ▶ Press **MENU** to return to the Current Event/Status Display.

To use the port for a different SIM channel:

- ▶ From the Current Event/Status Display, press **MENU**.
- ▶ Use the **DOWN** arrow key to select Self Test, then press **ENTER**.
- ▶ Use the **DOWN** arrow key to select 4-20 mA Test, then press **ENTER**.
- ▶ Use the **RIGHT** arrow key to select 4-20 mA SIM, then press **ENTER**.
- ▶ Use the arrow keys to input the desired channel number that will be output by the 4-20 mA circuit, then press **ENTER**.
- ▶ Press **MENU** to return to the Current Event/Status Display.

Interpreting 4-20 mA output values

The TTDM-128 adjusts its current loop output based on the leak detection status of the selected SIM channel, as detailed in the table below. Outputs in the range of 0 to 4 mA are used to indicate fault conditions (0 to 3.5 mA) or normal operation (4 mA), while outputs in the 5 to 20 mA range indicate the location of a leak. The leak location values output by the 4-20 mA board have a resolution of 0.5% of the scale range.

Fault conditions coded into the 0-4 mA range:

Output (mA)	Description
0	Electronics fault or loss of power
1.0	Fault — SIM communications
2.0	Fault — cable break
3.0	Fault — cable damage
3.5	Service Required alarm (loop imbalance)

Normal condition and leaks:

Output (mA)	Description
4.0	System normal
5.0–20.0	Leak — value scaled to indicate location of leak



TTDM-128
TraceTek Leak Detection
Master Module

For more information see: www.tracetek.com
www.tycothermal.com

Or contact us at one of these locations:

Worldwide Headquarters
Tyco Thermal Controls
300 Constitution Dr.
Menlo Park, CA 94025-1164
USA
Tel (800) 545-6258
Fax (800) 596-5004

Europe
Tyco Thermal Controls
Staatsbaan 4A
3210 Lubbeek
Belgium
Tel +32 (16) 213-511
Fax +32 (16) 213-600

Asia
Tyco Thermal Controls
9th Floor, Yeul-Chon Building
24-1, Yeoido-Dong
YeungDeungpo-ku
150-010 Seoul, South Korea
Tel +82 (2) 2129-7731
Fax +82 (2) 785-4700

info@tycothermal.com
www.tycothermal.com

Important: All information, including illustrations, is believed to be reliable. Users, however, should independently evaluate the suitability of each product for their particular application. Tyco Thermal Controls makes no warranty as to the accuracy or completeness of the information, and disclaims any liability regarding its use. Tyco Thermal Controls' only obligations are those in the Tyco Thermal Controls Standard Terms and Conditions of Sale for this product, and in no case will Tyco Thermal Controls or its distributors be liable for any incidental, indirect, or consequential damages arising from the sale, resale, use or misuse of the product. Specifications are subject to change without notice. In addition, Tyco Thermal Controls reserves the right to make changes – without notification to Buyer – to processing or materials that do not affect compliance with any applicable specification.

Tyco, TraceTek and the TraceTek logo are trademarks of Tyco Thermal Controls LLC or its affiliates.

MODBUS is a trademark of Gould, Inc. OptoMux is a trademark of Opto-22. Metasys is a trademark of Johnson Controls.